DANGER: DISCONNECT THE ELECTRIC POWER SUPPLY BEFORE SERVICING.

SCHEMATIC

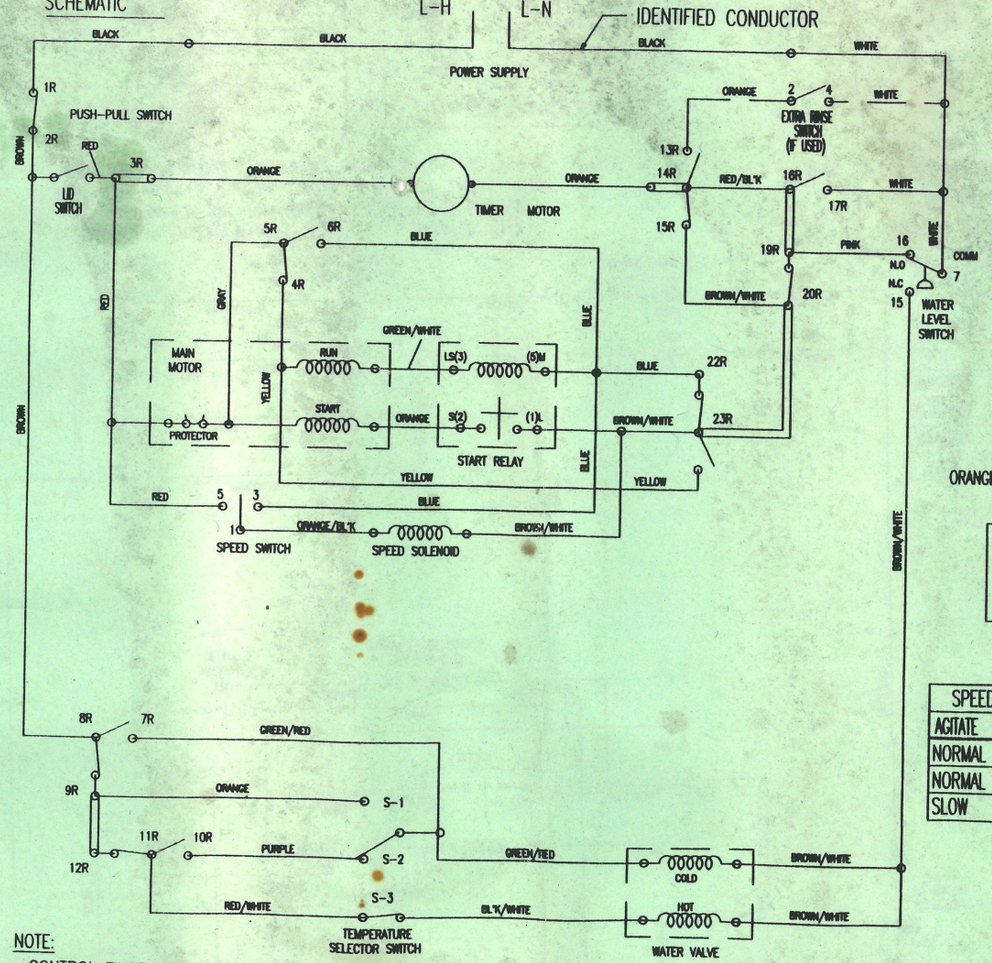

CONTROL TIMER CAM CHART

(360°=131 MINUTES)

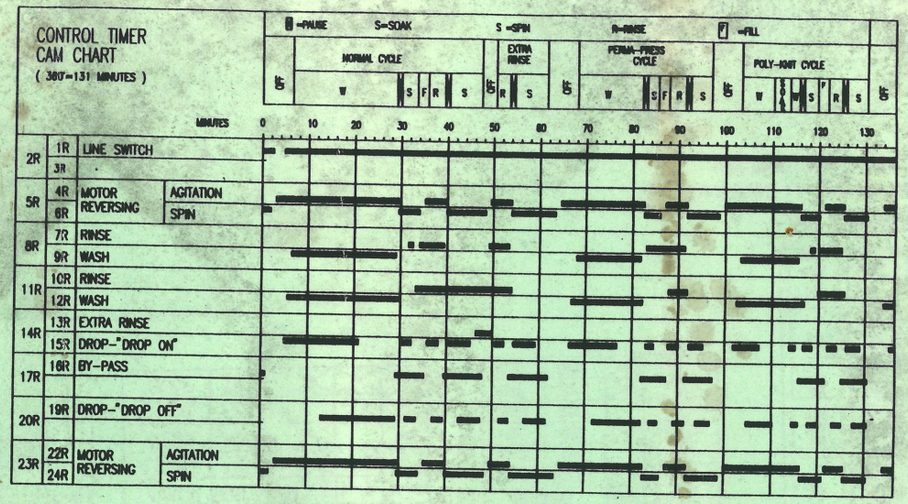

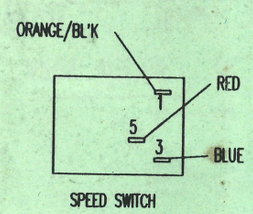

SPEED SWITCH

SPEED SWITCH		CONTACTS	
AGITATE	SPIN	1-3	1-5
NORMAL	NORMAL		
NORMAL	SLOW	X	
SLOW	SLOW		X

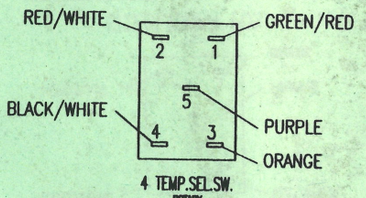

4 TEMP.SEL.SW. ROTARY

SWITCH 4 POSITIONS		S1	S2	S3
WASH	RINSE	1-3	1-5	2-4
COLD	COLD	X		
WARM	COLD	X		X
HOT	COLD			X
WARM	WARM	X	X	X

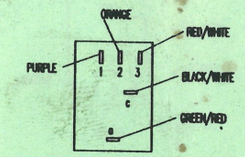

5 TEMP.SEL.SW. ROTARY

TEMP. SWITCH		S-1	S-2	S-3
WASH	RINSE	a-2	a-1	c-3
HOT	WARM		X	X
WARM	WARM	X	X	X
HOT	COLD			X
WARM	COLD	X		X
COLD	COLD	X		

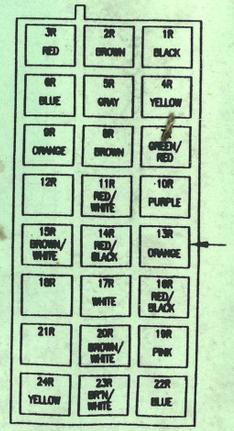

CONTROL TIMER PLUG

VIEWED LOOKING AT TIMER MOTOR WITH SHAFT DOWN.

NOTE:

CONTROL TIMER CAM SWITCHES ARE SHOWN SET AT " 20 MIN. "ON CONTROL TIMER CAM CHART MANUAL SELECTOR SWITCHES ARE SHOWN SET FOR "HOT WASH","WARM RINSE", "NORMAL AGITATION","NORMAL SPIN" AND NO "EXTRA RINSE".

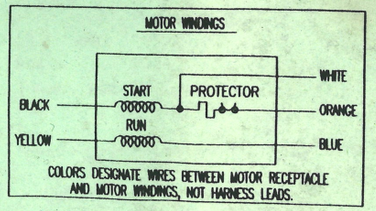

COLORS DESIGNATE WIRES BETWEEN MOTOR RECEPTACLE AND MOTOR WINDINGS, NOT HARNESS LEADS.

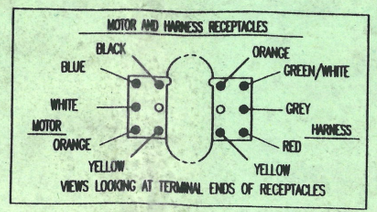

VIEWS LOOKING AT TERMINAL ENDS OF RECEPTACLES

WATER LEVEL SWITCH

BEFORE DISCONNECTING HOSE FROM WATER LEVEL SWITCH, BE SURE WATER LEVEL IN MACHINE IS BELOW BOTTOM OF WASH BASKET.

AFTER RECONNECTING HOSE, PUT THE MACHINE IN SPIN FOR AT LEAST ONE MINUTE BEFORE CHECKING THE OPERATION OF WATER LEVEL SWITCH.

572D020P017

Moffat MW77LW129 LR-S222 Comco Inc